



# ALSONIC RAVM MC

Open channel radar flow meter

## ALSONIC

### GENERAL


SmartMeasurement's ALSONIC RAVM-MC is a combined radar velocity and level transducer used with our multi-channel controller (MC) which may include a number radar velocity (VS) transducers to provide a true non-intrusive approach to open channel area velocity measurement in channels having widths of up to 500 m. The Alsonic-RAVM-MC can also be configured with up to 32 standalone radar velocity (VS) and/or velocity/level (VL) transducers in series in order to accurately profile large open channel systems (please see diagram on page 2.) The system is designed for continuous non-intrusive flow measurement of rivers, streams, municipal wastewater, and storm water channels. Users can also install a number of radar velocity (VS) transducers in combination with our radar level transducers (RL) which provides the same measurement as the combined VL/VS system. For channel widths of up to 10 meters, a cost-effective single channel system (SC) is recommended. The Alsonic RAVM-MC requires a multichannel controller with configuration software and MODBUS output to be configured in the control room on a standalone PC. MODBUS data includes flow, velocity, and height as well as sensor diagnostics. In applications where users want to install another level measurement technology (other than radar), either a single or multiple ALSONIC radar velocity transducers can be used for velocity profiling across the channel in combination with the level transducer by sending the outputs to our multichannel controller (MC) to perform the Area • Velocity flow calculation.



Alsonic RAVM VL

### FEATURES

- Can be configured with up to 32 non contact velocity transducers to profile large channels of up to 500 meters width
- Easy installation and maintenance
- Standard remote flow computer and touch screen option
- Bi directional velocity measurements
- User friendly setup and diagnostic software
- Micro power consumption
- Eliminates swing interference caused by wind and/or weather
- Optional surcharge water level sensor

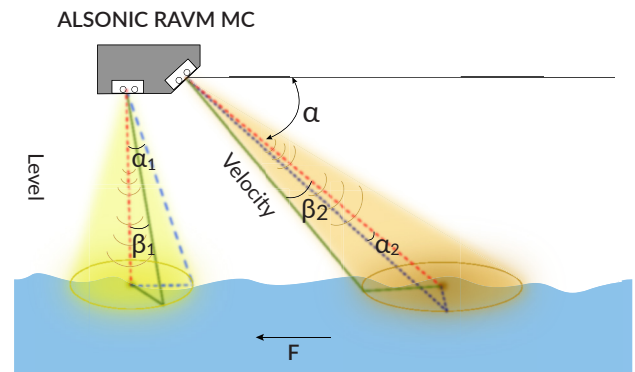


### SPECIFICATIONS

#### Velocity transducer (VS)



- Range: 0.15~15m/s
- Accuracy:  $\pm 0.01\text{m/s}$ ,  $\pm 1\%$
- Frequency: 24GHz
- Power supply:  $6\sim 24V_{DC}$ ,  $< 80\text{mA}$
- Output: RS485/Modbus
- Install angle:  $\alpha = 45^\circ$
- Beam angel:  $\alpha_2 = 12^\circ$ ,  $\beta_2 = 25^\circ$
- Protection: IP67
- Dimensions: 100x100x50mm

#### Level transducer (RL)

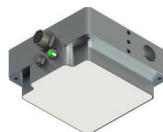

- Level:  $- 26\text{GHz}$ , 1.2~30m,  $\alpha_1 = 12^\circ$ ,  $\beta_1 = 12^\circ$   
 $- 24\text{GHz}$ , 1.2~30m,  $\alpha_1 = 5^\circ$ ,  $\beta_1 = 10^\circ$   
 $- 24\text{GHz}$ , 0.4~30m,  $\alpha_1 = 8^\circ$ ,  $\beta_1 = 8^\circ$   
 $- 60\text{GHz}$ , 0.25~7m,  $\alpha_1 = 7^\circ$ ,  $\beta_1 = 7^\circ$
- Accuracy:  $\pm 3\text{mm}$ ,  $\pm 1\%\text{FS}$
- Power supply:  $8\sim 16V_{DC}$ ,  $< 12\text{mA}$
- Comunication: RS485, 4-20mA, SDI12
- Protection: IP67
- Dimensions: 100x100x50mm


#### Multichannel controller (MC)



- Input: RS485 up to 32
- Power supply:  $5\sim 17V_{DC}$ ,  $5\text{mA}@12\text{V}$
- Output: Velocity, level, flow, Datalogger,  $4\sim 20\text{mA}$ , 2 relays ( $8\text{A}@250V_{AC}$ ,  $5\text{A}@30V_{DC}$ )
- Comunication: RS485, Modbus
- Protection: IP54
- Dimensions: 145x90x41mm

## DIMENSIONS

Alsonic RAVM – multichannel flow/velocity

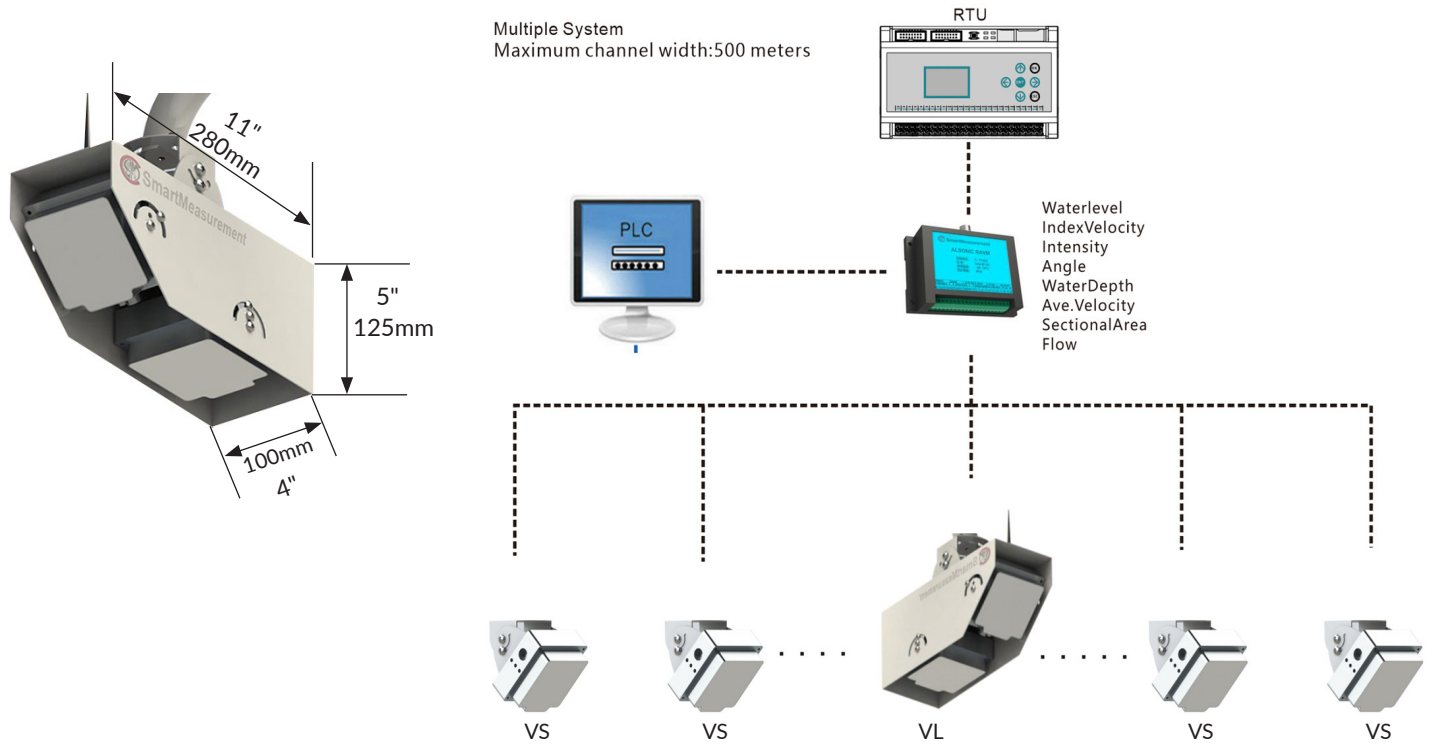




## APPLICATIONS



## MOUNTING SYSTEM




### Mounting Plate, Spring Ring and Scissors Rings.

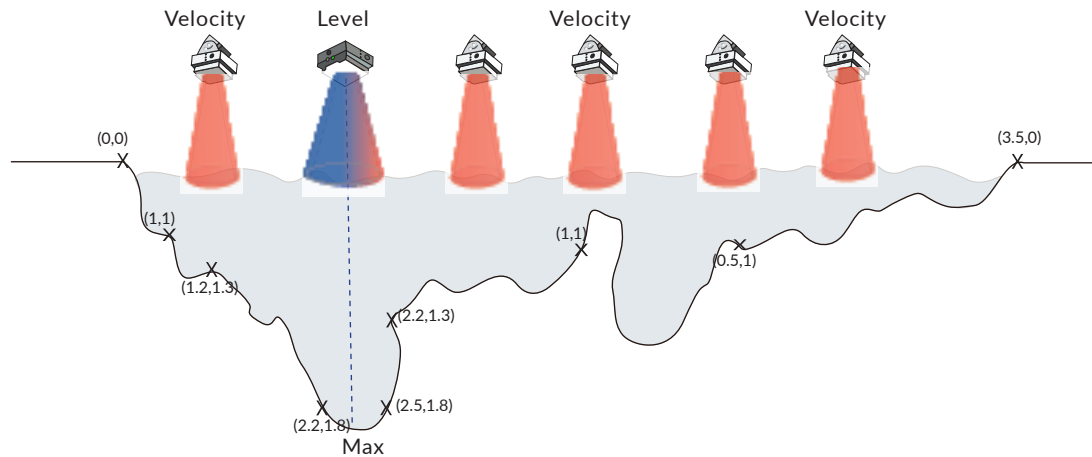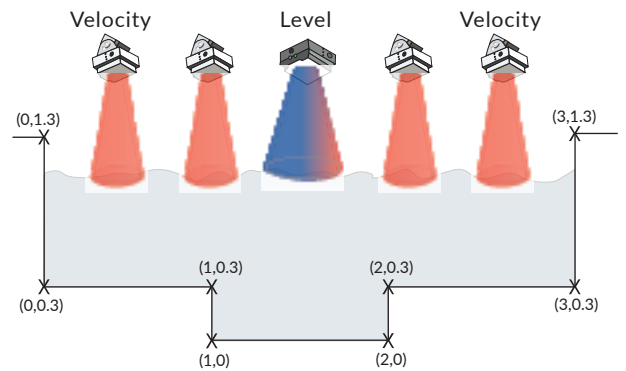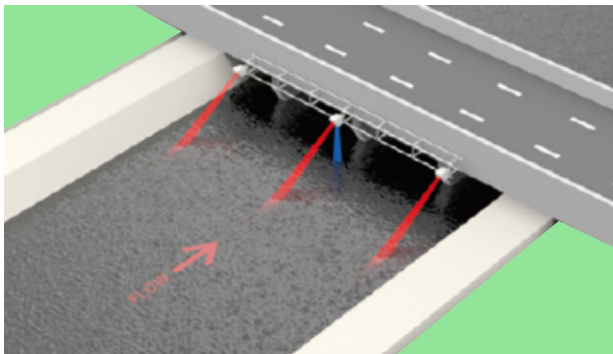All sensors can be attached to a mounting plate or spring and scissors rings to install the sensors in minutes, thus reducing time in the manhole. The sensor is first attached to a carrier which can then slide onto any of the compatible mounting systems. This maintains a height suitable for measuring flow rates and velocities at very low water levels. To install the sensors in rectangular, trapezoidal or earthen channels, we recommend the sensor mounting plate. Stainless steel spring rings simplify sensor installation in cylindrical pipes. Standard diameter sizes from 150 mm (6 inches) to 600 mm (24 inches) are available. You can install the sensor and fasten the cable to the downstream edge of the ring in place before entering the manhole. The self-expanding device is tightened by expanding the band for a friction fit inside of the pipe. The adjustable scissors ring is installed in large diameter pipes from 500 mm (20 inches) to 1800 mm (72 inches) in diameter. It consists of a base section, one or more pairs of extensions to fit the size of the pipe, and a scissors mechanism.



## CONFIGURATION SOFTWARE

<b>TYPE OF FLUID</b>	Please provide the name of your fluid media, the operating PH, and conductivity
<b>FULL SCALE FLOW</b>	Please provide the max and min flow rate, in units of CMH, GPM or LPM, etc.
<b>CHANNEL SHAPE AND DIMENSIONS</b>	Please provide channel shape and dimensions including maximum and minimum level
<b>CHANNEL MATERIAL</b>	Channel material such as concrete, fiber glass, mud

ALSONIC RAVM-						TRANSDUCER STYLE
Velocity + level sensor, width 0.8~12m (level 1.2~30m), 6~24V <sub>DC</sub> , RS485		VI				Multi-Channel Flow
Level sensor, width 0.8~12m (level 1.2~30m), 6~24V <sub>DC</sub> , RS485		RL				
Velocity sensor, 6~24V <sub>DC</sub> , 4-20mA, RS485	VS					Velocity Transducer - up to 32psc
Solar power supply Multichannel controller up 32 transducers (maximum channel width 500 meters) including RS485 and configuration software, IP54		MC				Multi-channel controller
Solar power supply			SL			Power supply
6~24 V <sub>DC</sub>			DC			
90~245 V <sub>AC</sub> , 50/60Hz			AC			
None options			NN			Power supply
Extreme cold style			BC			
Configuration software program			Config			
Display module for MC controller			DP			
LORA			LO			
Bluetooth			BT			
RTU data logger			DL			
Lighting rod			LR			
Installation tool and accessories			IS			
RoHS approval			RP			
IP68 Protection			68			

Sales and Service/Ventes et Service  
**Cancoppas**  
LIMITED  
 Mississauga, Ontario Montréal, Québec  
 905.569.6246 514.697.4202  
 controls@cancoppas.com www.cancoppas.com