



Continuous Emissions Monitoring and Process Control

# Waste to Energy Plants

### Continuous Emissions Monitoring and Process Control

## Waste to Energy Plants

Process control and emission monitoring in a waste to energy plant is a challenge. A large number of gaseous components need to be measured with high accuracy. Almost 100% uptime is required and the monitoring system needs to be easy to maintain and fast to calibrate.

The OPSIS system is different compared to other systems on the market and provides the waste to energy plant with an accurate analyser that will operate with a minimum of maintenance.

The OPSIS system is based on a non-contact DOAS/ FTIR method, using an optical path that can operate across the duct. The optical light is transported in an optical fibre to the analyser and one analyser can operate several paths.

A single OPSIS system will measure all relevant gas components such as NO<sub>x</sub>, SO<sub>2</sub>, CO, CO<sub>2</sub>, H<sub>2</sub>O, HCl, HF, NH<sub>3</sub>, CH<sub>4</sub> and Hg.

#### **RETURN OF INVESTMENT**

The cost of investing in an OPSIS system is small compared to the amount of money that is spent on maintaining old and complex extractive systems. The OPSIS system has low cost of ownership based on few moving parts, long intervals between calibrations, easy operation and low energy consumption.

#### **TEST AND APPROVALS**

The OPSIS system has been tested and approved by a number of internationally recognized institutes and authorities. The system meets the European directive for waste and is approved by German TÜV and British MCERTS. Full details are available on request.


#### **OPSIS PRODUCT PORTFOLIO**

OPSIS has a full product portfolio for measurements of gases in a range of applications. It includes complete CEM systems including reporting, process analysers for raw gas measurements, TDL analysers for NH<sub>3</sub>, HCl, and O<sub>2</sub>, oxygen analysers, compact analysers based on dilution extractive and Hg analysers.

For further information, please visit www.opsis.se.

**QAL 1 CERTIFICATION:** BEST PERFORMANCE

LONGEST CALIBRATION INTERVAL

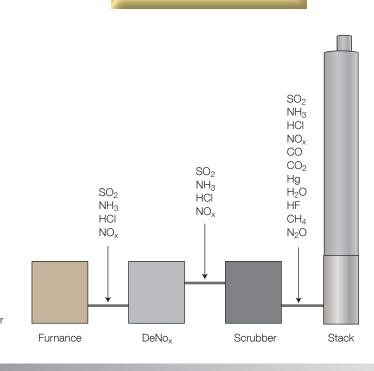


OPSIS monitoring system is an effective tool for controlling the different emissions and process control spots in a waste incinerator



### SYSTEM OVERVIEW

An OPSIS system layout for emissions monitoring and process control in a waste incineration plant.

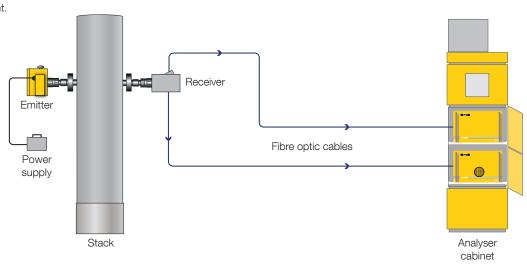

#### **PERFORMANCE DATA**

(typical data which may vary depending on application)

| Compound                        | Max. measurement range<br>(1 m path) <sup>(1)</sup> | Lowest measurement<br>range according to<br>EN 15267 | <b>Min. detectable quantities</b><br>(monitoring path 1 m,<br>measurement time<br>30 sec.) |
|---------------------------------|---|--|--|
| UV/IR DOAS Analyser             | Models AR600 / AR602Z / AR602Z                      | /Hg / AR602Z/N / AR602Z/NH                           | g / AR620  |
| NO <sup>(2)</sup>               | 0-2000 mg/m <sup>3</sup>                            | 0-150 mg/m <sup>3</sup>                              | 0.5 mg/m <sup>3</sup>  |
| NO <sub>2</sub>                 | 0-2000 mg/m <sup>3</sup>                            | 0-20 mg/m <sup>3</sup>                               | 0.5 mg/m <sup>3</sup>  |
| SO <sub>2</sub>                 | 0-5000 mg/m <sup>3</sup>                            | 0-75 mg/m <sup>3</sup>                               | 0.5 mg/m <sup>3</sup>  |
| NH <sub>3</sub> <sup>(3)</sup>  | 0-1000 mg/m <sup>3</sup>                            | 0-10 mg/m <sup>3</sup>                               | 0.5 mg/m <sup>3</sup>  |
| Hg⁰                             | 0-1000 µg/m³  | 0-45 µg/m³   | 0.5 µg/m³  |
| Hg <sup>tot</sup>               | 0-1000 µg/m³  | 0-45 µg/m³   | 0.5 μg/m³  |
| H <sub>2</sub> O                | 0-100% Vol.   | 0-30% Vol.   | 0.1% Vol.  |
| Benzene                         | 0-1000 mg/m <sup>3</sup>                            | -  | 1 mg/m <sup>3</sup>  |
| Br <sub>2</sub>                 | 0–10000 mg/m <sup>3</sup>                           | -  | 5 mg/m <sup>3</sup>  |
| l <sub>2</sub>                  | 0–10000 mg/m <sup>3</sup>                           | _  | 5 mg/m <sup>3</sup>  |
| FTIR DOAS Analyser              | Models AR650 / AR650/N                              |  |  |
| HCI                             | 0-5000 mg/m <sup>3</sup>                            | 0-15 mg/m <sup>3</sup>                               | 0.5 mg/m <sup>3</sup>  |
| CO                              | 0-10000 mg/m <sup>3</sup>                           | 0-75 mg/m <sup>3</sup>                               | 2 mg/m <sup>3</sup>  |
| H <sub>2</sub> O                | 0-100% Vol.   | 0-30% Vol.   | 0.1% Vol.  |
| HF                              | 0-1000 mg/m <sup>3</sup>                            | 0-1.5 mg/m <sup>3</sup>                              | 0.1 mg/m <sup>3</sup>  |
| NH <sub>3</sub>                 | 0-1000 mg/m <sup>3</sup>                            | -  | 2 mg/m <sup>3</sup>  |
| N <sub>2</sub> O <sup>(4)</sup> | 0-10000 mg/m <sup>3</sup>                           | 0-500 mg/m <sup>3</sup>                              | 5 mg/m <sup>3</sup>  |
| CH <sub>4</sub>                 | 0-10000 mg/m <sup>3</sup>                           | 0-20 mg/m <sup>3</sup>                               | 0.5 mg/m <sup>3</sup>  |
| CO <sub>2</sub>                 | 0-100% Vol.   | 0-20% Vol.   | 0.1% Vol.  |
| LD500 Laser Diode G             | as Analyser   |  |  |
| HCI                             | 0-5000 mg/m <sup>3</sup>                            | -  | 0.5 mg/m <sup>3</sup>  |
| CO                              | 0-100% Vol.   | -  | 0.1% Vol.  |
| H <sub>2</sub> O                | 0-100% Vol.   | -  | 0.1% Vol.  |
| HF                              | 0-5000 mg/m <sup>3</sup>                            | -  | 0.1 mg/m <sup>3</sup>  |
| NH <sub>3</sub>                 | 0-5000 mg/m <sup>3</sup>                            | -  | 0.5 mg/m <sup>3</sup>  |
| CO <sub>2</sub>                 | 0-100% Vol.   | -  | 0.1% Vol.  |
| O <sub>2</sub>                  | 0-21% Vol.  | -  | 0.1% Vol.  |
| $CH_4$                          | 0-10000 mg/m <sup>3</sup>                           | -  | 0.5 mg/m <sup>3</sup>  |
| Temperature                     | 0–1400°C  | -  | 5°C  |

<sup>(1)</sup> This data refers to a light path of 1 m. For longer paths, the maximum range is proportionally smaller. Products are available to create shorter

<sup>(2)</sup> Maximum SO<sub>2</sub> concentration: 5 g/m<sup>3</sup> x m.
 <sup>(3)</sup> Maximum SO<sub>2</sub> concentration: 500 mg/m<sup>3</sup> x m.
 <sup>(4)</sup> Detection limit of 1 mg/m<sup>3</sup> is optional with hardware upgrade.

• Recommended monitoring path length: 1 to 5 m.

 After wet scrubbers or when particulate concentration averaged over 1 m is higher than 5 g/m³, the monitoring path length may have to be reduced.

· Accuracy is better than 2% of measured value or equal to the detection

limit (whichever is the greater).

· For span and zero driff, please refer to QAL1 documents.

Linearly error (of measurement range, better than): ±1%.
Max. length of fibre optic cable: please refer to product sheet P9 and P16.



## Continuous Emissions Monitoring and Process Control by OPSIS

One system for all components including Hg Combines the benefits of UV/FTIR DOAS and TDL technology Best performance according to QAL 1 certification Longest calibration interval according to QAL 1 certification Automatic QAL 3 check as option No sampling required, non-contact measurement system Operates with a minimum of maintenance Low energy consumption Gas calibration only once per year Internationally approved Thousands of systems installed worldwide Serviced by highly skilled service network



Please contact your OPSIS supplier to discuss your particular system requirements, including the compounds you wish to monitor. Separate product and other industrial application sheets are available. Specifications subject to change without notice.

Cancoppas Québec Ltée Téléphone: (514) 697-4202 Télécopieur: (514) 697-6292 880 Ave Selkirk, Pointe-Claire, QC, H9R 3S3

WWW.CANCOPPAS.COM CONTROLS@CANCOPPAS.COM